



# FETCO®



## Operating Instructions for Extractor® Coffee Brewing Systems



Make sure the main power switch (located under front panel, directly behind front leg) and control panel switch is on.



If low temperature / no brew is enabled the display will read the temperature. No brew lights will illuminate until the brewer is ready. The display may also read "Fill" which indicates the brewer is filling with water or "No Bas" which indicates the brew basket is not in place correctly. If "Er" and a 3 digit code are displayed an Error has occurred. Please contact your local service company for assistance or call FETCO® Technical Support at (800) FETCO-99.



Before starting the initial brew, pre-heating of the LUXUS® Thermal Dispenser(s) is strongly recommended to avoid brewing into a cold or room temperature container -- thereby accelerating heat loss. This should be done first thing in the morning.



Pre-Heating: Make sure the brew basket(s) are in place and the LUXUS® Thermal Dispenser is in position under the brew basket. Select a batch from the available choices and hold the corresponding brew button in for 2 seconds to start the brew cycle. When the hot water brew finishes, let the water stay inside the container for about 5-10 minutes. Drain the water from the container before beginning to brew.



Place a paper filter carefully inside the brew basket and then fill it with the appropriate amount of coffee.



Slide the brew basket all the way back along its tracks. Make sure the LUXUS® Thermal Dispenser is empty, in position under the brew head, and the faucet is closed. Select a batch from the available choices and hold the corresponding brew button in for 2 seconds to start the brew cycle. The stop button will illuminate, and the selected brew button will flash. Before removing the brew basket or dispenser, visually verify that dripping has stopped.